

For PXRView to operate properly, the following conditions must exist within the PXR IJ Printer:

- SOP4 must be installed and enabled
- Firmware 4.07 or later must be installed

To set the proper execution environment in the PXR IJ Printer:

- From the main screen, press “MENU” to toggle to the purple menu options
- Press “ENVIRONMENT SETUP MENU”
- Press “COMMUNICATION ENVIRONMENT SETUP”

State at power-up:	[0] or [1] (User Preference)
Baud Rate:	[8] 19200
Data Length:	[2] 8 bits
Parity Bit:	[0] Disable
Stop Bit:	[1] 1 bit

Number of comm. Bytes:	[1] 1 byte
BCC Code handling:	[0] Disable
Communication mode:	[2] Overwrite enabled

- Press “NEXT SETTINGS”

Print msg transfer ACK:	[2] t=async
Print spec trans char ht:	[0] 2 digits
Comm and Signal err:	[0] Warning

<Special Communication> (Note: Not Available when SOP Kit is not installed)

Start Output:	[1] Enable
Output kind:	[2] Code
Condition:	[1] Every time
Status Output:	[1] Enable